

Micro-Klean™ D Series Blanket Media Filter Cartridges

The Micro-Klean™ D series filter cartridge is a major advance in blanketed filter technology. By combining an enhanced open wind process with an internal media blanket, the Micro-Klean D series provides superior flow rates, greater filtration efficiency, and consistent filtration characteristics from cartridge to cartridge, lot to lot.

The superior performance is a direct result of the advanced winding pattern of the yarn matrix combined with 3M Purification Inc.'s process of separately applying a tailored media "blanket" between successive layers of yarn. This winding pattern creates much larger diamond shaped contaminant holding chambers. The separately inserted blanket encloses the chambers and maintains the consistency and integrity of filtration. These two factors combine to achieve a balance of filtration characteristics impossible to obtain with ordinary wound filter cartridges with teased or brushed up random fibers on the yarn to produce a filtering media.

The Micro-Klean D series winding pattern also provides less restriction than the patterns common to ordinary wound cartridges. Consequently, it is not unusual for Micro-Klean D series filter cartridge to provide up to 2 ½ times more open area, enhancing the flow rate by up to 500% for the same pressure drop (see Graph 1).

Micro-Klean D series is a blanket media cartridge offering true graded density, with more open filtration on the outside of the filter and fine, more efficient filtration, on the inner layer of the cartridge. Blinding of the filtration surfaces by large particles is minimized and cartridge life extended. Lower cartridge replacement costs are achieved as demonstrated in Graph 2.

Micro-Klean D series filter cartridges, with nominal ratings from 0.5 to 350 microns, are available with various media, matrix, and core materials to ensure compatibility with your process. Standard materials include cotton yarn/cotton media blanket for use in applications involving water, alcohol, and other polar liquids. Cotton materials are CFR 21 compliant for use with potable water, food, and beverage products.

The polypropylene yarn/polypropylene media blanket configuration, also CFR 21 compliant, is excellent for use with acids, alkalis, strong oxidizing and reducing agents, and other chemicals in aqueous solutions.

Features & Benefits

Blanket media filter cartridge

- Higher filtration efficiency at the selected rating

CFR 21 listed materials of construction

- Suitable for food & beverage, and other regulated applications

Graded density construction

- Very low pressure drop and high flow rates
- Longer filter life and more cost effective filtration

Low extractable levels

- Suitable for water, electronics and electroplating

Integral lengths from 9 7/8" To 40"

- Reduces joints that cause blinding or by-pass
- Easy to install and reduce

Choice of construction materials

- Ensures process and system compatibility

High dirt holding capacity

- Reduces filter change-outs

Wide variety of end fittings

- Suitable for all filter housings


Cleaner, more durable construction

- Less media migration than conventional wound cartridges




Better By Design...

- Enhanced Reduction Efficiency
- Superior Capacity for Long Life
- Wide Range of Reduction Ratings
- CFR21 Compliant Materials

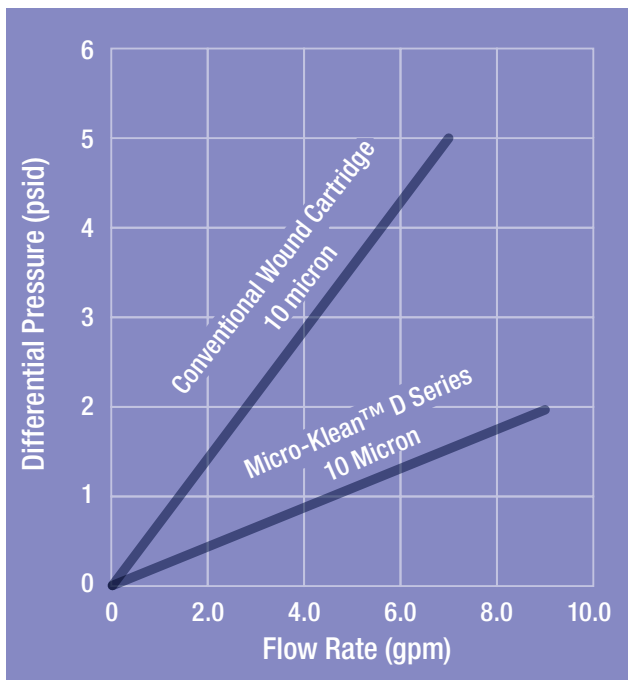

Graph 1 – Flow Comparison

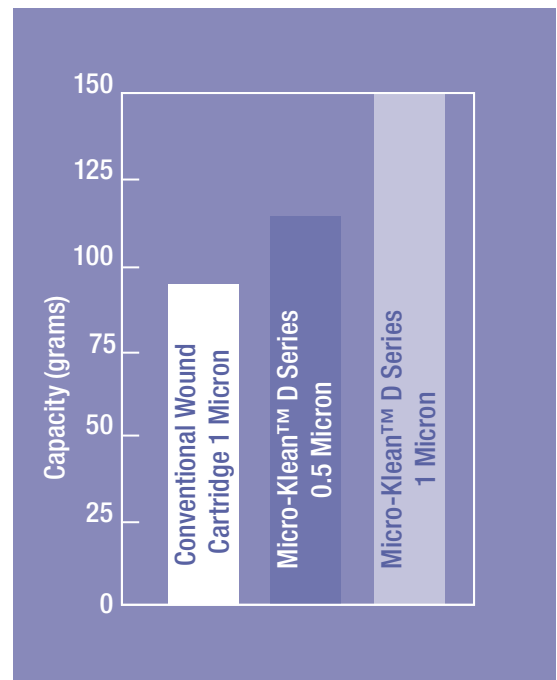

Graph 2 – Service Life



Micro-Klean™ D Series Cartridge Configurations

Cartridge Disposal

Micro-Klean™ D series cartridges can be incinerated or shredded when configured with polypropylene cores. Metal cores can be crushed by high pressure techniques after media incineration. Other methods may be more economical when using metal cores.

Configurations

Cartridges can be configured with tinned steel, stainless steel, or polypropylene cores. The use of various core materials provide an advanced range of compatibility.

Table 1 – Cartridge Comparisons

Micron Rating	Tinned Steel	304 SS Core	316 SS Core	Polypropylene Core
Polypropylene Media Blanket/Yarn Cartridges (150 °F)				
0.5	D-FFFZ	D-FFSZ	D-PTZ	D-PPPZ
1	D-PPFY	D-PPSY	D-PPTY	D-PPPY
3	D-PPFA	D-PPSA	D-PPTA	D-PPPA
5	D-PPFB	D-PPSB	D-PPTB	D-PPPB
10	D-PPFC	D-PPSC	D-PPTC	D-PPPC
25	D-PPFF	D-PPSF	D-PPTF	D-PPPF
50	D-PPFL	D-PPSF	D-PPTF	D-PPPF
75	D-PPFQ	D-PPSQ	D-PPTQ	D-PPPQ
100	D-PPFV	D-PPSV	D-PPTV	D-PPPV
350	D-PPFW	D-PPSW	D-PPTW	D-PPPW
Cotton Media Blanket/Yarn Cartridges				
	(250 °F)			(150 °F)
0.5	D-CCFZ	D-CCSZ	D-CCTZ	D-CCPZ
1	D-CCFY	D-CCSY	D-CCTY	D-CCPY
3	D-CCFA	D-CCSA	D-CCTA	D-CCPA
5	D-CCFB	D-CCSB	D-CCTB	D-CCPB
10	D-CCFC	D-CCSC	D-CCTC	D-CCPC
25	D-CCFF	D-CCSG	D-CCTF	D-CCPF
50	D-CCFL	D-CCSL	D-CCTL	D-CCPL
75	D-CCFQ	D-CCSQ	D-CCTQ	D-CCPQ
100	D-CCFV	D-CCSV	D-CCTV	D-CCPV
350	D-CCFW	D-CCSW	D-CCTW	D-CCPW

Micro Klean™ D Series

The Micro-Klean™ D series media blanket is superior to the brushing method of conventional wound cartridges that breaks the yarn fibers resulting in media migration. The media blanket produces greater filtration efficiency, increased contaminant holding capacity, and substantially cleaner filtration.

The Micro-Klean™ D series winding pattern combined with the media blanket produces a more rigid structure and reduces the restriction caused by the yarn. This results in an enhanced flow of up to 500%, in turn reducing the size and cost of filtration hardware!

Table 1 lists the various configurations for Micro-Klean™ D series filters. Micro-Klean D series cartridges can be configured with various end-treatments and O-ring materials to fit competitive filter housings (see Ordering Guide).

Cartridge Flow Rates

Aqueous Flow Rates – Micro-Klean D series cartridges exhibit excellent flow performance. For good filter practice, the flow values listed in Table 2, by grade designation, are recommended for maximum service life.

Non Aqueous Flow Rates – Calculate using the formula in conjunction with the values shown in Table 3. The specific pressure drop values may be effectively used when three of the four variables (Viscosity, Flow, Differential Pressure, and Cartridge Grade) are set.

Table 2 – Aqueous Rates

Grade	Flow Rate *(gpm)
Z	2
Y	2
A	3
B, C	4
F, L, Q, V, W	5

* Flow rates are for single length cartridges (9 7/8 - 10")

$$\text{Clean } \Delta p \begin{matrix} \text{psi} \\ \text{(mbar)} \end{matrix} = \frac{\left(\text{total system gpm [lpm]} \right) \left(\text{viscosity in cst} \right) \left(\text{value from table} \right)}{\left(\text{Number of Equivalent Single Length Cartridges in housing} \right)}$$

Table 3 – Micro-Klean™ D Series Flow Rates

Grade	Nominal Rating (µm)	Specific Pressure Drop per 10" Cartridge *			
		Polypropylene Media		Cotton Media	
		psid/gpm/cst	mbar/lmp/cst	psid/gpm/cst	mbar/lmp/cst
Z	0.5	0.21	3.84	0.62	11.20
Y	1	0.14	2.55	0.47	8.62
A	3	0.10	1.86	0.39	7.10
B	5	0.04	0.71	0.17	3.12
C	10	0.03	0.49	0.08	1.49
F	25	0.02	0.33	0.05	0.93
L	50	0.010	0.19	0.03	0.47
Q	75	0.008	0.15	0.013	0.24
V	100	0.005	0.10	0.011	0.20
W	350	0.004	0.08	0.006	0.11

* Specific pressure drop at ambient temperature for a single length equivalent (10") cartridge. Table values are shown for liquids with kinematic viscosity equal to 1.0. Kinematic viscosity in centistokes (cst) can be calculated by dividing the viscosity in centipoise by the specific gravity of the fluid. For multiple cartridge lengths, divide the total flow by the number of equivalent lengths.

Micro-Klean™ D Series Ordering Guide

Basic Catalog Number	Media Blanket	Matrix	Core Material	Grade Designation		Nominal Cartridge Length		End Modification*	O-ring Material
				Grade	Nominal Rating (μ)	Code	Length		
D – No Extended Core	C – Cotton	C – Cotton	P – Polypropylene	Z	0.5	1**	9 7/8"	C – Code 8 Double O-Ring Connector & Spear F – Code 3 Double O-Ring Connector & Flat Cap	A – Silicon B – Fluorocarbon C – EPR D – Nitrite
S – 316 S.S. Extended Core	P – Polypropylene	P – Polypropylene	F – Tinned Steel	Y	1	2	19 1/2"		
P – Polypropylene Extended Core			S – 304 S.S.	A	3	2x	20"		
			T – 316 S.S.	B	5	3	29 1/4"		
				C	10	3x	30"		
				F	25	4	39"		
				L	50	4x	40"		
				Q	75				
				V	100				
				W	350				

Option: For voile covered core, insert the letter V before the grade designation
 * End Modification Requires use of the polypropylene core
 ** Fits 9 3/4" and 10" housings

Important Notice

The information described in this literature is accurate to the best of our knowledge. A variety of factors, however, can affect the performance of the Product(s) in a particular application, some of which are uniquely within your knowledge and control. **INFORMATION IS SUPPLIED UPON THE CONDITION THAT THE PERSONS RECEIVING THE SAME WILL MAKE THEIR OWN DETERMINATION AS TO ITS SUITABILITY FOR THEIR USE. IN NO EVENT WILL 3M PURIFICATION INC. BE RESPONSIBLE FOR DAMAGES OF ANY NATURE WHATSOEVER RESULTING FROM THE USE OF OR RELIANCE UPON INFORMATION.**

It is your responsibility to determine if additional testing or information is required and if this product is fit for a particular purpose and suitable in your specific application.

3M PURIFICATION INC. MAKES NO REPRESENTATIONS OR WARRANTIES, EITHER EXPRESS OR IMPLIED INCLUDING WITHOUT LIMITATION ANY WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR OF ANY OTHER NATURE HEREUNDER WITH RESPECT TO INFORMATION OR THE PRODUCT TO WHICH INFORMATION REFERS.

Limitation of Liability

3M Purification Inc. will not be liable for any loss or damage arising from the use of the Product(s), whether direct, indirect, special, incidental, or consequential, regardless of the legal theory asserted, including warranty, contract, negligence or strict liability. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.



3M Purification Inc.
 400 Research Parkway
 Meriden, CT 06450
 U.S.A.
 Phone (800) 243-6894
 (203) 237-5541
 Fax (203) 630-4530
 www.3Mpurification.com

Please recycle. Printed in U.S.A.
 3M is a trademark of 3M Company.
 Micro-Klean is a trademark of
 3M Company used under license.
 © 3M 2011. All rights reserved.
 70-0201-8716-0 REV 1011pb